

Ex. No 5:- Use Autopsy to create a case and import evidence

Date:-

Aim:-

To use Autopsy to create a new forensic case, import a disk image as evidence, and analyze it.

Description:-

Autopsy is an open-source digital forensics platform used for analyzing and extracting data from digital devices. Here's a step-by-step process on how to use Autopsy for a basic forensic investigation:

Drive link: https://drive.google.com/drive/u/1/folders/1ilSFY7Tqn2L7AjQGhq8yJ8kixc_xTU-v Download files: [4Dell Latitude CPi.E01](#), [4Dell Latitude CPi.E02](#)

1. Installation

- **Download and Install:** Autopsy can be downloaded from the official website. Follow the installation instructions based on your operating system (Windows, Linux, or macOS).

2. Starting a New Case

- **Open Autopsy:** Launch the application after installation.
- **Create a New Case:**
 - Click on New Case.
 - Enter the case name and location where the case data will be stored.
 - Fill in the details like the case number, examiner's name, etc., and click Next.

3. Adding a Data Source

- **Choose the Type of Data Source:**
 - After creating a case, you'll be prompted to add a data source.
 - You can add disk images, directories, logical files, or local disks.
- **Select the Data Source:**
 - Browse to the location of the image file (e.g., .E01, .dd, or .raw), physical disk, or directory you want to analyze.
 - <https://drive.google.com/drive/u/1/folders/1ilSFY7Tqn2L7AjQGhq8yJ8kixcU-v>
- **Configure Ingest Modules:**
 - Autopsy allows you to select specific analysis modules such as File Type Identification, Keyword Search, Hash Lookup, etc.
 - You can enable or disable these based on your investigation needs.
- **Start Analysis:** Click Next to start the analysis.

4. Initial Analysis and Overview

- **Ingest Progress:** As Autopsy processes the data source, you'll see the progress in the lowerleft corner.
- **Explore the Resulting Artifacts:**

- Autopsy automatically categorizes findings such as web artifacts, file system metadata, and communication records.
- **Use the Tree Viewer:**
 - On the left pane, you'll see a tree structure where you can explore different aspects like File System, Web History, Email, etc.

5. Detailed Analysis

- **Keyword Search:**
 - You can perform specific keyword searches using the Keyword Search module.
 - Use pre-configured lists or enter custom keywords.
- **File Analysis:**
 - Navigate through files and folders under the File Types or File System section.
 - Open, view, or export files for further examination.
- **Timeline Analysis:**
 - Use the Timeline module to visualize events based on timestamps.
 - This can help track user activity over time.
- **Hash Analysis:**
 - Compare file hashes with known databases to identify known good or bad files.

6. Reporting

- **Generate a Report:**
 - After analyzing the data, click on Generate Report from the toolbar.
 - Choose the type of report (HTML, CSV, Excel, etc.).
 - Select which parts of the analysis you want to include in the report.
- **Export Findings:** ○ Export individual files or artifacts that you need for your report or further analysis.
- **Final Review:**
 - Review the report to ensure it includes all relevant information.
 - Save or print the report for use in your case.

7. Case Closure


- **Close the Case:** ○ Once you have completed your investigation, close the case within Autopsy.
- **Archiving:**
 - Ensure all data and reports are properly archived according to your organization's policies.

8. Advanced Features (Optional) ● Custom Ingest Modules:

- Autopsy allows for custom modules to be added if you need specific analysis tools not included by default.
- **Collaboration:**

- Autopsy can be configured for multi-user cases if you're working in a team environment.

Screen Shots:

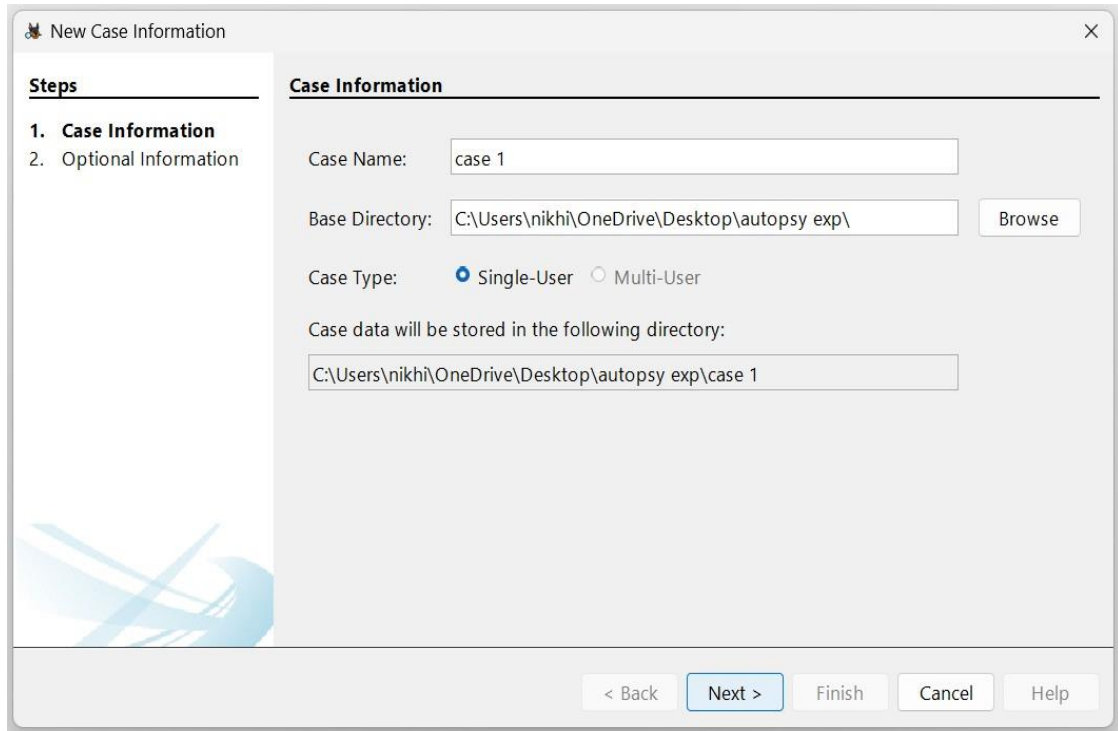

The screenshot shows the 'New Case Information' dialog box with the 'Case Information' step selected. The 'Case Name' field contains 'case 1'. The 'Base Directory' field contains 'C:\Users\nikhi\OneDrive\Desktop\autopsy exp\' and has a 'Browse' button next to it. The 'Case Type' section has 'Single-User' selected with a radio button. Below this, a text box indicates 'Case data will be stored in the following directory:' followed by 'C:\Users\nikhi\OneDrive\Desktop\autopsy exp\case 1'. At the bottom, there are navigation buttons: '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'.

New Case Information

Steps

- 1. Case Information**
- Optional Information

Case Information

Case Name: case 1


Base Directory: C:\Users\nikhi\OneDrive\Desktop\autopsy exp\ Browse

Case Type: ☒ Single-User ☐ Multi-User

Case data will be stored in the following directory:

C:\Users\nikhi\OneDrive\Desktop\autopsy exp\case 1

< Back Next > Finish Cancel Help

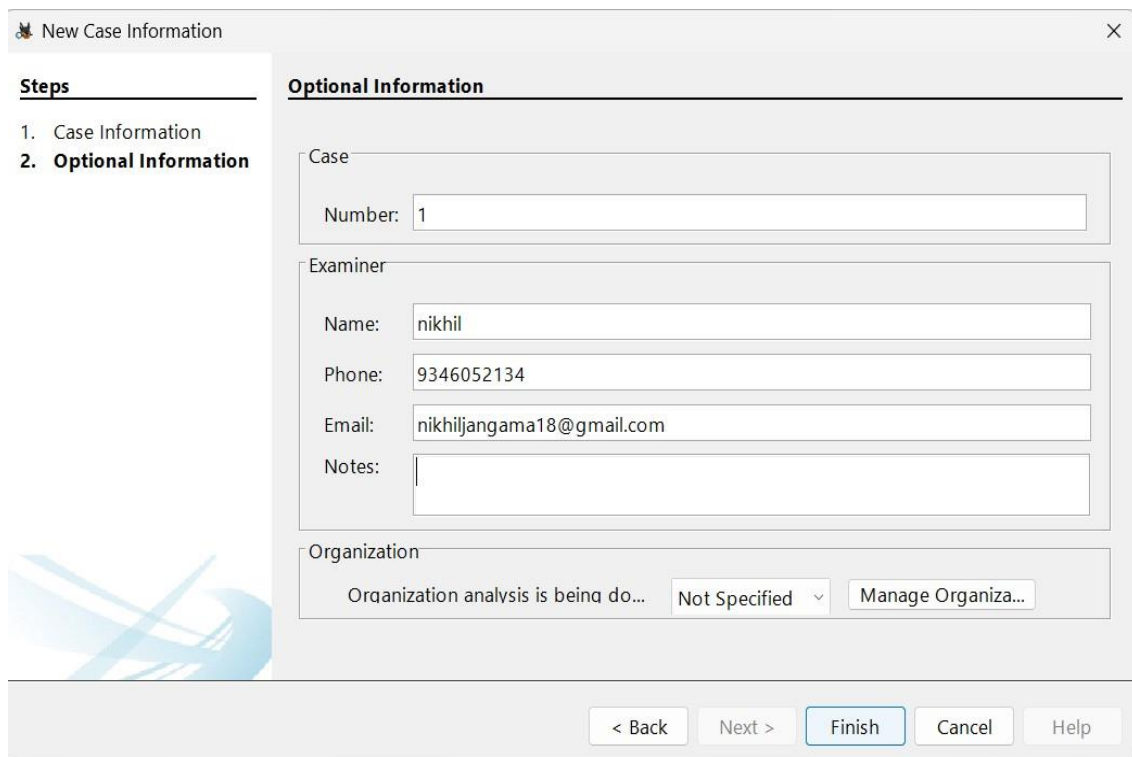

The screenshot shows the 'New Case Information' dialog box with the 'Optional Information' step selected. The 'Case Number' field contains '1'. The 'Examiner' section contains fields for 'Name' (nikhil), 'Phone' (9346052134), and 'Email' (nikhiljangama18@gmail.com), along with a 'Notes' text area. The 'Organization' section has a text box with 'Organization analysis is being do...', a 'Not Specified' dropdown menu, and a 'Manage Organiza...' button. At the bottom, there are navigation buttons: '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'.

New Case Information

Steps

- Case Information
- 2. Optional Information**

Optional Information

Case

Number: 1

Examiner

Name: nikhil

Phone: 9346052134




Email: nikhiljangama18@gmail.com

Notes:

Organization

Organization analysis is being do... Not Specified Manage Organiza...

< Back Next > Finish Cancel Help

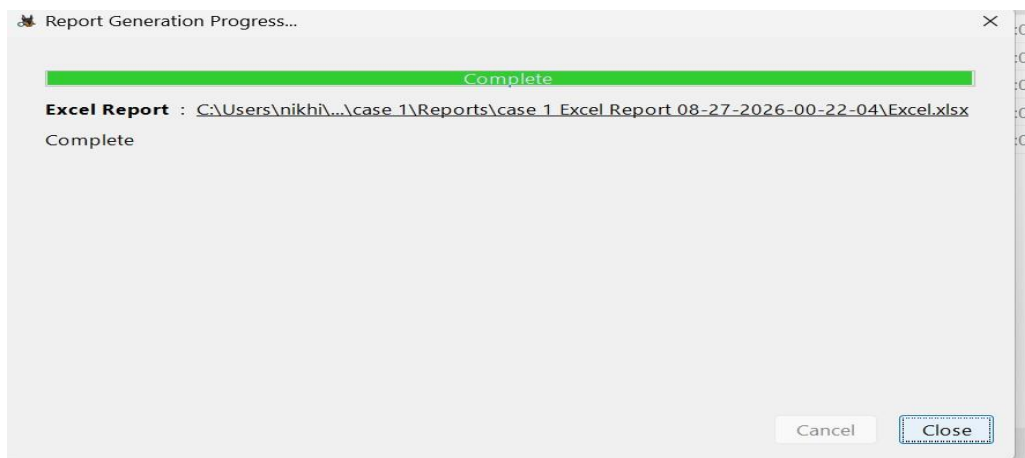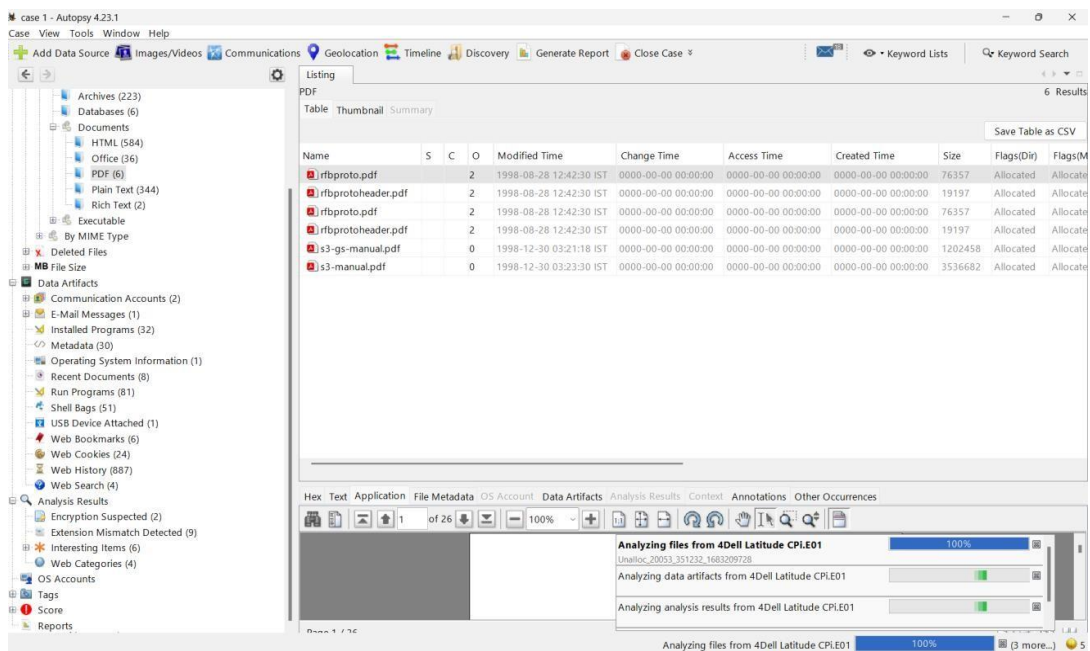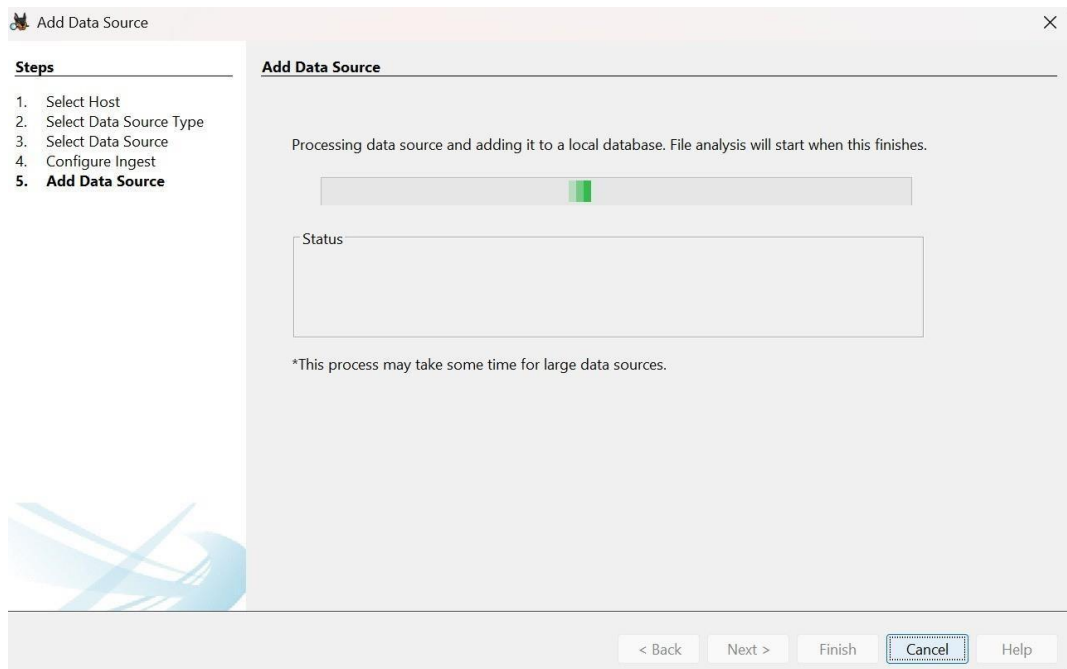

Summary	
Case Name:	case 1
Case Number:	1
Number of data sources in case:	1
Case Notes:	autopsy case 1
Examiner:	nikhil

Rubrics:-

Criteria & Marks Assigned	Mark Allotted	Mark Awarded
1. GitHub Activity & Submission Regularity	3	
2. Application of Forensic Tools & Practical Execution	3	
3. Documentation & Reporting	2	
4. Engagement, Problem-Solving & Team Collaboration	2	
Total	10	

Result:-

A case was created and the disk image (4Dell Latitude CPi.E01) was added and analyzed, with files, deleted items, and data artifacts categorized. An Excel report was then generated for the case.